

# Extension plate for RM-SV series Rackmount RM-AP165

<User Guide>

- Thank you for choosing our product.
- To ensure the best performance of this product, please read this guide fully and carefully before using
  it and keep this manual together with the product for future reference as needed.

#### Before reading this manual

- All rights reserved.
- Some information contained in this document may differ depending on the product version.
- This document is subject to change without notice. You can download the latest version from IDK's website at: http://www.idkav.com

#### **Included items**


Verify that all items listed below are included in the package. If any items are missing or damaged, please contact IDK.

#### [Table 1] Included items

RM-AP165	
Single plate	1
M3 screw (W Sems M3xL8)	4

#### **About RM-AP165**

The RM-AP165 provides extra space in the rear side of the RM-SV series for placing objects by tying a zip-ties or the like to 6x6 mm square hole.

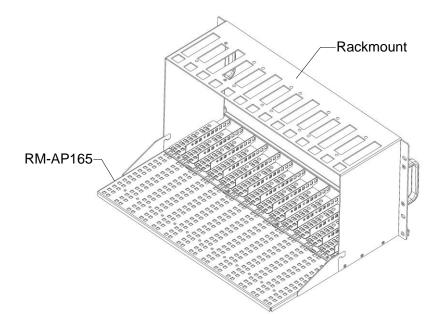

[Fig. 1] RM-AP165 drawing


#### **Precaution**

Please observe the following precautions.

- Power off all devices before installation.
- Dissipate static electricity before installation. Failure to observe this precaution may result in ESD (electrostatic discharge) damage.
- The appropriate screw tightening torque: <u>M3: 0.59 N⋅m (6.1 kgf⋅cm, approx.)</u>


## Mounting RM-AP165 in RM-SV series

1. Place the single plate as shown below.

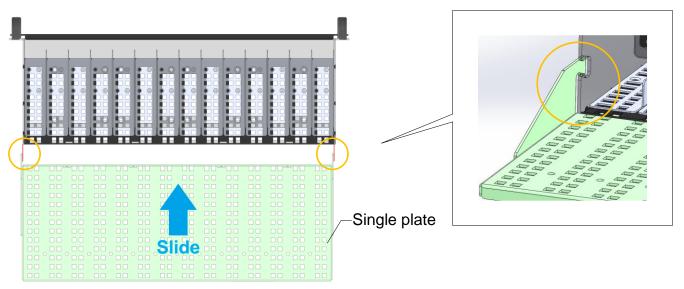


[Fig. 2] Placing single plate

2. Slide the single plate to the rackmount as shown below.

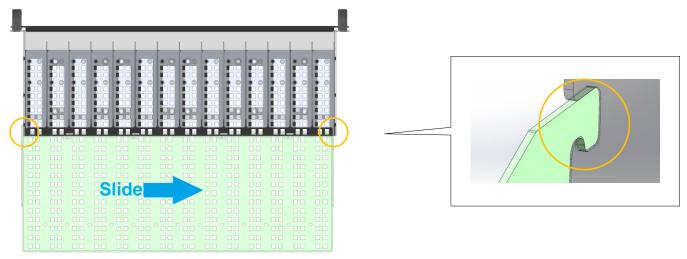

[Fig. 3] Fixing single plate

3. Secure the single plate from the bottom face using supplied M3 screws.

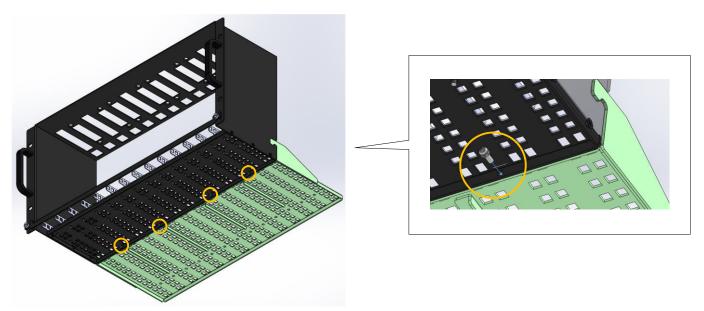

[Fig. 4] Securing plate

## **Dimension and weight**

### [Table 2] Dimension and weight

Model	Dimension	Weight
RM-SV5+	19 (W) × 8.7 (H) × 12.4 (D)" (482.6 (W) × 222 (H) × 315 (D) mm	8.4 lbs. (3.8 kg)
RM-AP165	(Excluding connectors and the like)	, ,,
RM-SV3+	19 (W) × 5.2 (H) × 12.4 (D)" (482.6 (W) × 133 (H) × 315 (D) mm	7.7 lbs. (3.5 kg)
RM-AP165	(Excluding connectors and the like)	

#### User Guide of RM-AP165 Ver.1.1.0

Issued on: 1 December 2020



**Headquarters IDK Corporation** 

7-9-1 Chuo, Yamato-shi, Kanagawa-pref.

242-0021 JAPAN

TEL: +81-46-200-0764 FAX: +81-46-200-0765

Email: idk\_eng@idk.co.jp URL: <a href="http://www.idkav.com">http://www.idkav.com</a>

**USA** IDK America Inc.

72 Grays Bridge Road Suite 1-C, Brookfield, CT 06804

TEL: +1-203-204-2445

URL: http://www.idkav.com Email: sales@idkav.com

IDK Europe GmbH **Europe** 

Lise-Meitner-Str. 6, D-40878 Ratingen

TEL: +49-2102-578-301-0

Email: info@idkav.eu URL: http://www.idkav.com



**Product information** 

**Arvanics Corporation** 

7-9-1 Chuo, Yamato-shi, Kanagawa-pref. Support

242-0021 JAPAN

TEL: +81-46-259-6920 FAX: +81-46-259-6930

Email: info@arvanics.com **URL:** <a href="http://www.arvanics.com">http://www.arvanics.com</a>

Information in this document is subject to change without notice. ©2020 IDK Corporation, all rights reserved. All trademarks mentioned are the property of their respective owners.