

TPS (HDBaseT[™]) Switcher and Transmitter for DisplayPort, HDMI and DVI with Local Monitor Out





Part No: 9154 0065



SW4-TPS-TX240 is a flagship model in the Lightware TPS (HDBaseT[™] Transmitter) product family. The device can transmit universal video, audio and control up to a 170 meter distance over a single CAT cable in dynamically changing environments such as small board rooms and classrooms. The extender was designed to handle HDMI1.4 and DP1.1 digital video signals and analog stereo audio from local inputs or HDMI or DP Embedded Audio up to eight Channel PCM or HBR audio. Analog audio is converted into digital format. The device has a local HDMI video output. The video and the Embedded Audio of the local output is the same as the one transmitted via TPS link. The SW4-TPS-TX240 handles HDCP encryption. Using the factory, custom or transparent EDID emulation the user can fix and lock EDID data on each input connector. Advanced EDID

user can fix and lock EDID data on each input connector. Advanced EDID Management forces the required resolution from any video source and fixes the output format conforming to the system requirements. The unit offers bi-directional and transparent IR, RS232 and Ethernet transmission. Furthermore the RS232 and IR connection supports command injection. Remote powering is available through the single CAT 5e - CAT 7 cable, but local power supply can also be used. All devices can be mounted on a rack shelf or used standalone formats. SW4-TPS-TX240 is compatible with both the HDBaseT[™] extenders and matrix switchers.

Highlight features

- 4K/UHD (30Hz RGB 4:4:4, 60Hz YCbCr 4:2:0) and 3D capabilities
- Extends DVI, HDMI or DisplayPort + Audio + Ethernet + RS-232 + IR + GPIO over a single CAT5e(or higher class) cable up to a 170 m distance*
- Event Manager
- 10/100 Ethernet extension
- Bi-directional RS-232 and IR
- GPIO control port
- Embeds analog audio

Advanced Control Features:

- Support RS-232 protocol for communication and control of third party devices like VC codecs. This allows the Cisco Room Kit login on RS-232–USB connection
- Support to receive CEC commands for control of displays and Lightware Event Manager to automate room actions
- Support to send CEC commands on HDMI ports for control of other devices
- Support true Infrared messages using HEX codes to control TVs, media players and other devices with IR emitters
- 100 available event slots in 'Plus' extenders
 *Depends on cable category and quality

HDBaseT[™] and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance





1

Light Ware

Standalone Application

O

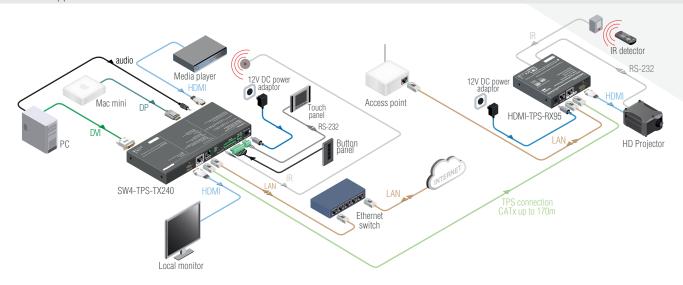

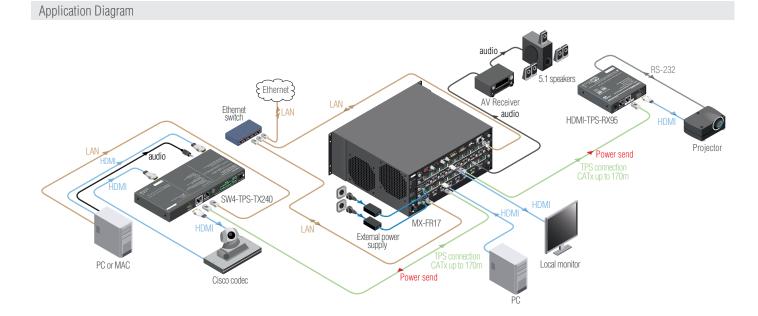

Transmitter Front and Back View PIN: 2.1mm GPIO RS-232 ٩ \odot TPS OUT (PoE) HDMI OUT IR IN IR OUT ± TX RX 12V 1A DC Ethernet 2 4 5 6 7 -VIDEO AUDIO VIDEO AUDIO VIDEO AUDIO VIDEO AUDIO HDCP RESET Auto AUDIO VIDEO SHOW AUDIO O DPIN HDMI IN OHDMI IN OVI-D IN SW4-TPS-TX240

LIGHTWARE

Event Manager

The Event Manager is a completely new feature of Lightware's UMX-TPS extender family. It's available through the Lightware Device Controller and can be configured to detect LW3 protocol CHANGE messages. The Event Manager was developed to handle tasks from the most simple; like displaying internal events on GPIO ports, and controlling the extender via GPIO inputs instead of front panel pushbuttons; to expert ones like controlling the rolling shutter, the air conditioning system or the lights based on any condition changes on the media ports, such as a new source being connected or removed. The Event Manager makes the UMX-TPS extender family an expert solution in a wider range of applications.

Event Manager Wizard

Assigning an action to a condition is quick and easy with the Event Manager's smart Wizard function. The user can choose from the given port options in the dropdown menu and also add expressions to it.

LIGHTWARE	UNX-TPS-TX140		-	Cresspoin)	<u>i</u>	***	o ^o servir		
1 AS-202 000 1	0Pio P.3 Ethernet 🛬 Iv	ha Vent							
Expert Inport	Load factory defaults	1-E10 E11-	E20	1				Show advi	anced expressions
Event1	- erabied Edit	Clear							
ET CONDITION Chow the butt		detected 0 times		DELAY Hadday		ACTION Dwitch.net		anformed (Test
Event2	r onabled Edit	Clear							
E2: CONDITION Vales signal in		detected 0 times	•	DELAY No flutay		ACTION Switch (42		parformed 9 times	Teat
Event3	- erabled Edit	Clear .							
EN CONDITION OPTO Make chi		detectiet) I times	٨	DCLAY No delay		ACTION Set OPID (performed " 0 times	Test
EventA	- enabled Edit	Cear							
EX CONDITION		detected (0 times		DELAY National		ACTION Send RD 2 Sec.P1		performed " 0 times	Test
a venta	r crutifel Edit	Cer							
ES CONDITION Emply condition		detected © times		DELAY Taji delay		ACTION THEPPTY MIT		performed 9 times	Test
Events	erabled Edit	Crar.							

The Events menu contains 20 separately configurable Events

CONDITION	ACTION
Video signal is detected on IT /MEDIG/VIDEO/11 SignalPrecent=1	Switch video input II to output 01 /MEDIA/MDEO/XP.switcher1.01
Wizard Advanced Late	Wizard Advanced Link
Category	Category
Wideo 👘	Video
Expression	Expression
Dignal is detected on a port	Switch input to sutput
Port	Imput Output
	II - DI -
	12
Clear Apply	13 14 Citour Apply
	5
CONDITION TEST DELAY	IG ACTION TEST
Counter O times Reset No delay	Counter O times Deset

The Event Wizard makes the setup easy with simple dropdown options

CONDITION	ACTION
Video signal is detected on 11 MEDAAV00EC(1): SignalPassant(*) Wizard Advanced Link	Switch rides input (1 to surput O) /http://www.input/science.com/ witzard /http://document.com/ Unit
Category Video	Category Video · Expression
Signal is denoted on a port • Citizeta one) • Signal is observed on a port •	Durtch input to output • Input Quantut In • OI • Clear Aceby
CONCITION TEST Counter: 0 times Reset detected No delay	Conter times Peret performed Test action

There are many default Expressions available to choose from


TAKE SHARE LANDARY MARKS TO THE STREET				Show when the dogrammer
Total I want I total adversariable Contra particip				The state of the
Awat results 200 200				
H) Presidentia	concred Colorer	Non-	* Statements show	2007
(1992) center (1997) (1997)				
Constants	Constant Character	 International production International production 	* ATTOM	Principal Transfer
Sweet, Sweeter Bill Dear				
E Solicital Transferration	terrend "	 Intervention 	• ASTISH Regeneration	princed the
(Terris)				
AL CONTRACTOR	enverset Tarnes	Constanting of the	* Anne	Care and
Tent				
er seneral and a second as a	in second	• Enternance	• Manager and a state of the	attend and
Leves (entres (10) (ter-				
in Constants Constants	enserve Chronie	R State	• Alexan	Print Terr
[4492				
EF Continues	(ancel	. HOW	Active	activity and

Green lines show which Event is configured and active, the rest stay grey


🔀 sales@lightware.com

Lightware

Event Manager Example A

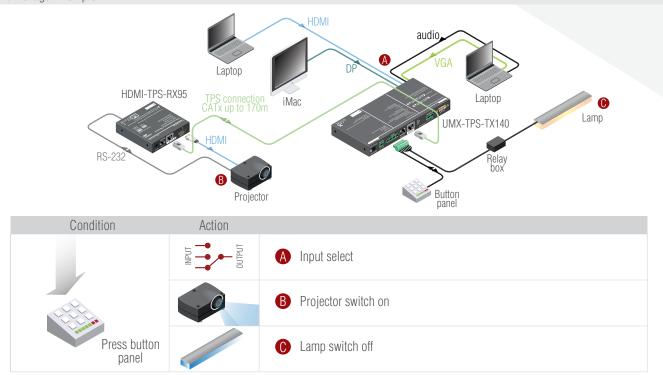


With a connected button panel trough the GPIO port the UMX-TPS-TX140 can be controlled from a remote location, input swithcing is available even if the transmitter mounted underdesk. In the example above there are three actions followed by a condition. When an input selector button is pressed on the remote button panel, the input port is switched to the selected one, the lamp switches off, and the projector turns on as well.

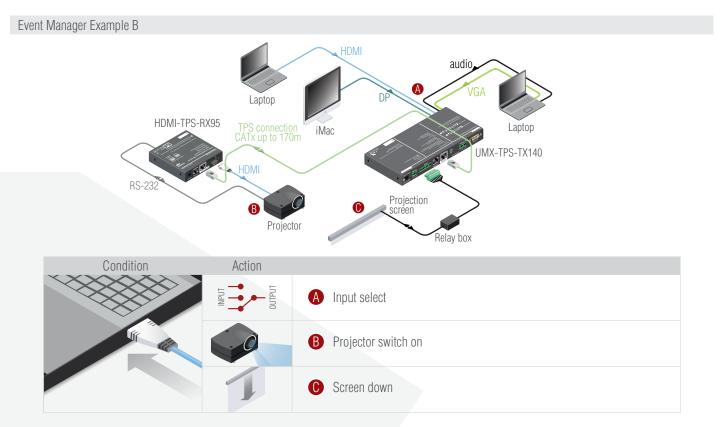

The projector and the rolling screen (through the Relay box) are connected to the UMX-TPS-TX140. When the user connects a laptop through HDMI to the transmitter the connected input is selected automatically the screen goes down and the projector turns on to display the connected source.

LIGHTWARE

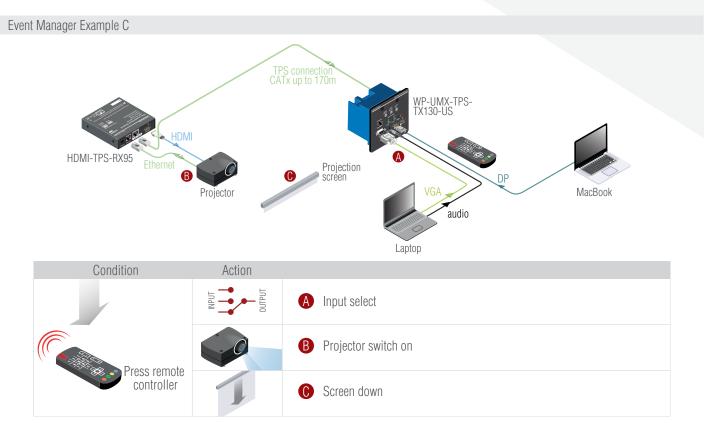


A MacBook with DisplayPort and another laptop with VGA and analog audio are connected to the WP-UMX-TPS-TX130-US wallplate which means there are two audio signals and two video signals connected. With a remote controller via IR these inputs can be switched. For example the analog audio of the Laptop can be mixed with the DisplayPort video of the MacBook. The Event Manager helps the user to assign actions like rolling the screen down and switch the projector on when the desired input is selected.



visual engineering

Port Diagram

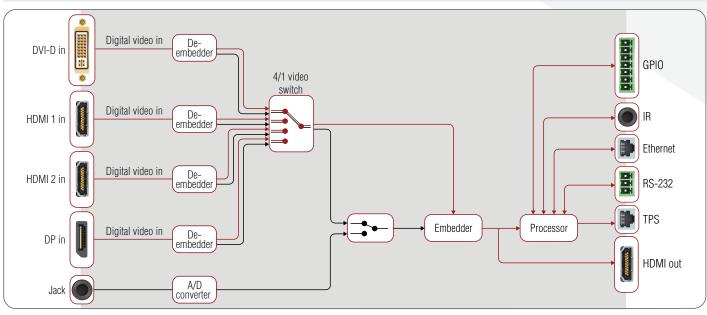

Compatibility Products

- MX Modular matrix frames with MX-TPS-IB or MX-TPS2-IB
- HDMI-TPS-RX90
- DVI-HDCP-TPS-RX95
- HDMI-TPS-RX95
- TPS-PI-1P1

Applications

- Small classrooms
- Conference rooms, meeting rooms
- Control rooms
- Home cinemas

Features

- 4K/UHD (30Hz RGB 4:4:4, 60Hz YCbCr 4:2:0) and 3D capabilities
- Extends HDMI1.4 + Audio + Ethernet + RS-232 + IR + GPIO over a single CAT5e-CAT7e cable up to 170 m distance*
- Audio and video connectors: HDMI (input), HDMI (local output), Stereo jack
- Advanced EDID Manager
- Event Manager
- 10/100 Ethernet extension
- Bi-directional RS-232 and IR
- GPIO control port
- HDCP compliant, CEC
- Embeds analog audio *Depends on cable category and quality

Analog Audio Input

Volume:	-96 0 dB
Balance:	0100%

Specifications

Resolution:

Digital audio formats:

Input cable equalization: EDID emulation: EDID memory: HDCP pass-through: RS-232 pass-through: RS-232 (control option):

Local power: Power over TPS: Power consumption: Enclosure: Dimensions: Compliance: Warranty: 1600x1200@60Hz, FullHD 1920x1080@60Hz Supports up to 8 channel PCM, Dolby TrueHD and DTS-HD Master Audio 7.1 formats Automatic max 20 m Yes, Advanced EDID Management 120 factory preset, 15 user programmable Yes Yes. configurable 9600, 19200, 38400, 57600, 115200 Baud Rx,Tx (local or through CATx)(default: 57600) Universal power adaptor, DC 12V 2.5A DC 48V 1 A 8W (typ) 1 mm metal 221 W x 100.4 D x 26 H mm CE 3 years

Up to 4K UHD 3840×2160@30Hz,

Connectors

Digital video input:	HDMI connector, DVI-D connector, DisplayPort
Digital video output:	HDMI connector
Audio input:	3.5 mm stereo jack
Ethernet:	1 x RJ45
GPIO:	8-pole PHOENIX
IR:	3.5 mm jack
TPS output:	1 x RJ45
Serial port:	3-pole PHOENIX
Power:	Locking DC connector (2.1 / 5.5 mm)

LIGHTWARE

Supplied Accessories



PSU-12VU Universal DC adaptor (Part No: 1180 0098) Wall power adaptor with interchangeable plug for international use. Universal input: 100-240 V AC, 50-60 Hz, output: 12 V DC, 2.5 A

Optional Accessories



Under desk mounting kit double (Part No: 5240 0276) The UD-kit double makes it easy to mount multiple devices on any flat surface (e.g. furniture).



IR emitter and IR eye (Part No: 1374 0003 TX, 1374 0002 RX) IR emitter is supplied with TPS-TX, IR eye is supplied with TPS-RX units. Needed for IR extension.



Rack shelf (Part No: 5240 0935)

1U high rack shelf provides mounting holes for fastening four quarter-rack sized units. Pocket sized devices can also be fastened on the shelf.

